

UNIVERSAL BLOWER SYSTEM



AD2 DUAL (168 CFM)

Single and Dual Mounted Blowers



AD1 SINGLE (84 CFM)

- Quiet, efficient operation.
- Universal, fits most gas and wood factory built fireplaces.
- Variable speed control included.
- Easy installation, blower and all components mount magnetically.
- Heat activation switch included.
- 110v power source required.

Connects in 3 easy steps -

Plug the rheostat into the outlet.



Plug the blower to the heat switch.

1

2 Connect to the rheostat.

3

SOLD BY:




NEW ENERGY DISTRIBUTING


Dyersville, IA 52040

Blower Installation Instructions

All electrical connections should be done by a qualified electrician.

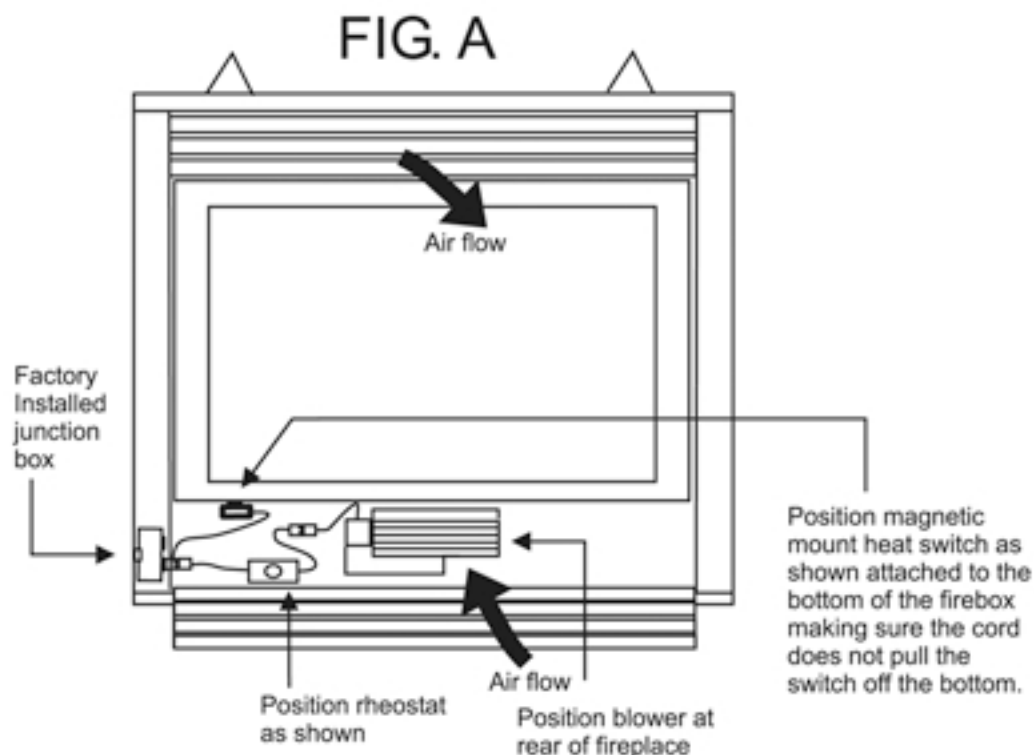

- 1) Lower the bottom grill.
- 2) Insert the blower from the left side bottom of the fireplace and maneuver the blower to the back of the fireplace as shown in FIG. A.
- 3) Position the blower in the center of the fireplace with the air discharge to the back and pointing upwards between the firebox and the back of the fireplace as shown in FIG. A.
- 4) Position the magnetic heat switch on the bottom of the firebox as shown in FIG. A.
- 5) Position the rheostat as shown in FIG. A.
- 6) Connect the power cord from the heat switch to the outlet on the side of the fireplace.
- 7) Connect the male end of the rheostat to the female end of the heat switch.
- 8) Connect the blower to the female end of the rheostat.

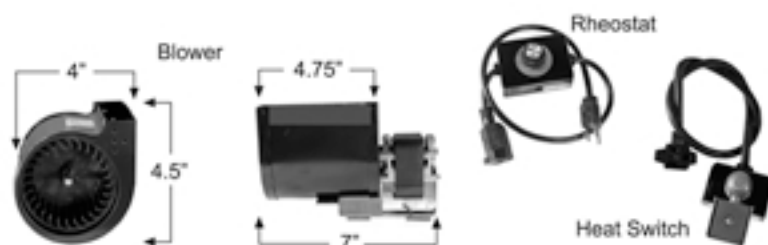

Wiring Diagram

