



CONVERTING HONEYWELL GAS VALVE TO SIT VALVE

Some field modification may be necessary w/bracket and gas connections.

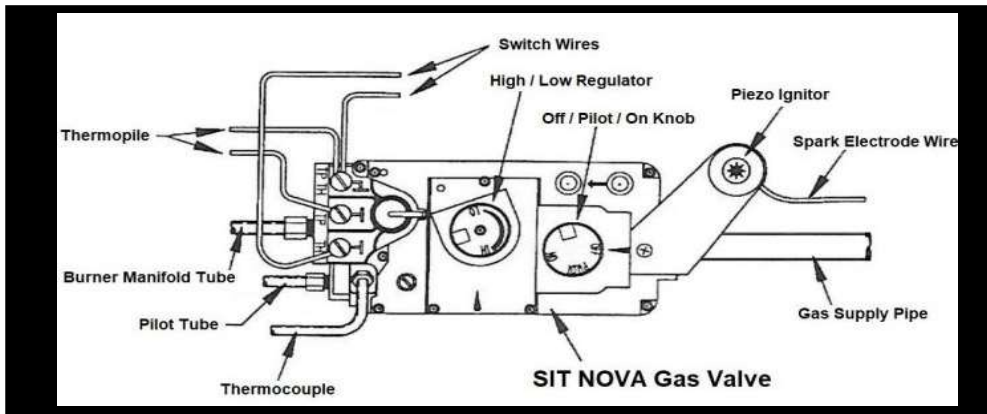

IN-----OUT
Arrow shows direction of gas flow.
New SIT valve may need to be installed
in different position than original
Honeywell valve. Installing new valve
backwards will cause damage to valve.

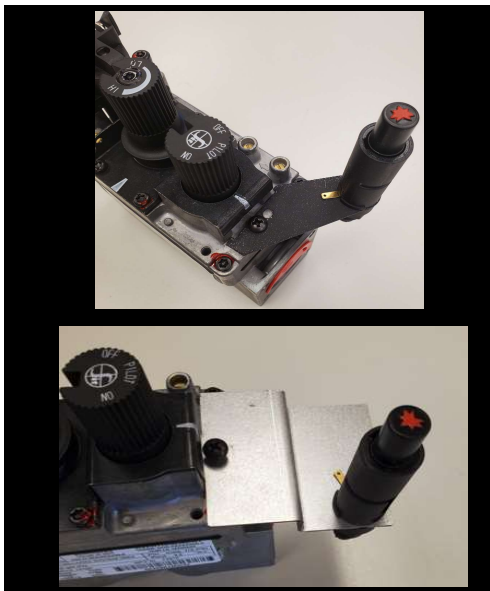


Piezo ignitor and bracket.




Thermocouple has 2 possible locations on the new SIT valve. The preferred is position 1 and will come configured for that position. This will provide easy connection at time of install & if future service if needed. If your original valve the thermocouple installed in the rear part of valve (position 2), simply stretch out the thermocouple wire and connect to position 1.



Valve bracket for gas stoves and some inserts.

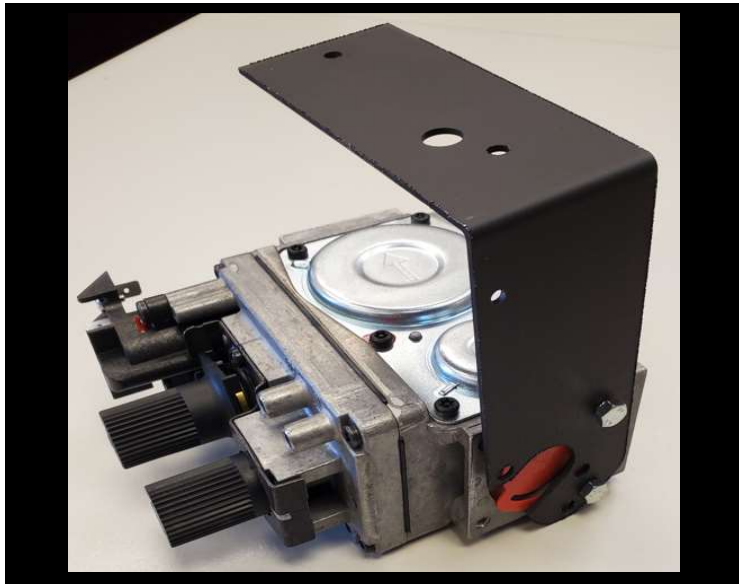

Valve bracket for gas fireplaces.

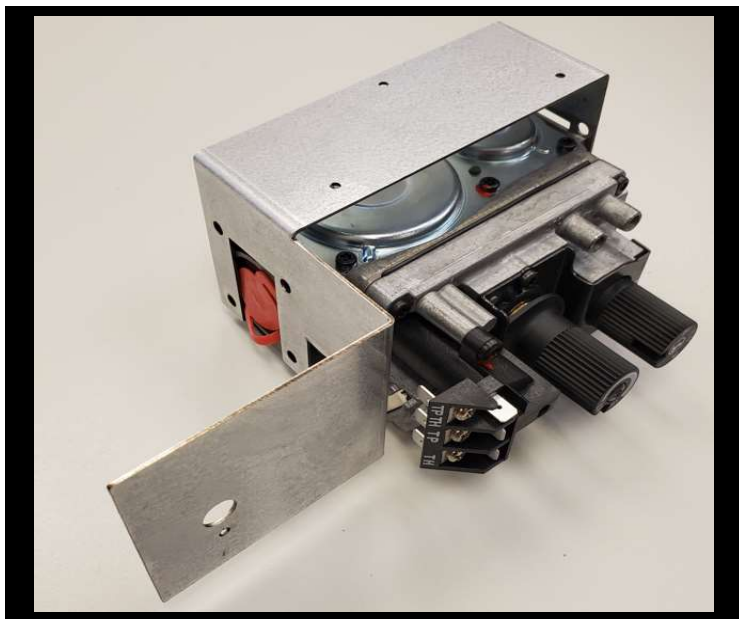

Valve bracket for gas fireplaces.