

# ANIH - ANIDRON INSTALLATION INSTRUCTIONS

Quality System Certified To  
**ISO**  
9001-2008  
W415-0708 / C / 09.13.11

## **! WARNING**


ENSURE THE UNIT IS COMPLETELY COOL BEFORE STARTING INSTALLATION

Andirons may be placed inside of the firebox, but must not interfere with the flame.


Depending on the appliance, there are several acceptable locations for the andirons.

Once a location is determined, secure the andirons with at least one screw per andiron; two screws each are recommended.

Do not modify or relocate logs to accommodate the andirons.

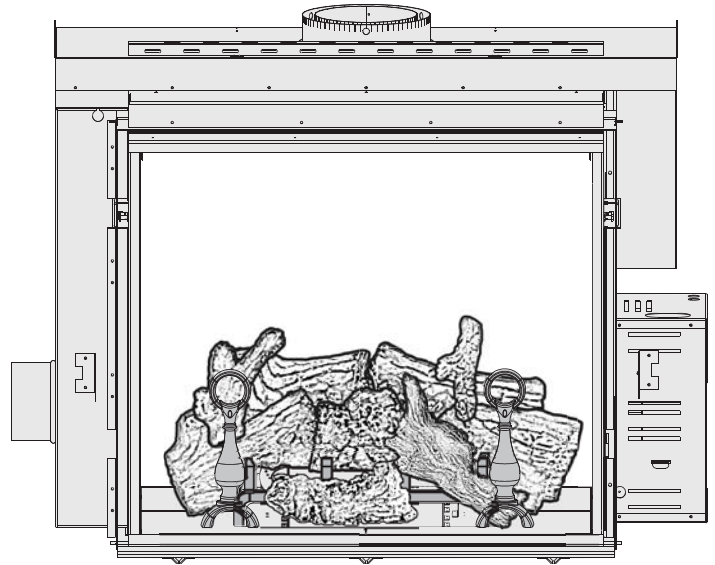

Example HD81

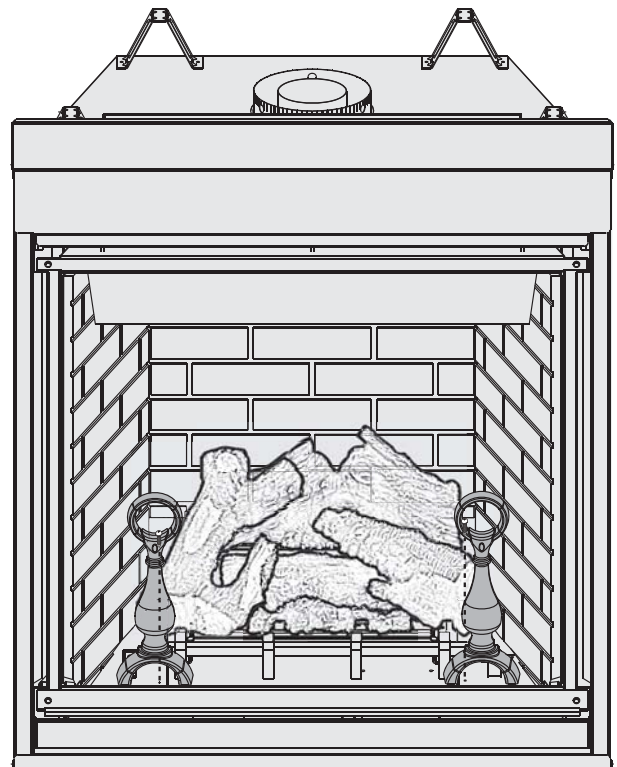

Example HD35

# INSTRUCTIONS D'INSTALLATION DES BORNES DE CHENET - ANIH

Systeme de qualite certifie  
**ISO**  
9001-2008

W415-0708 / C / 09.20.11

## ! ATTENTION


ASSUREZ-VOUS QUE LE FOYER EST COMPLÈTEMENT REFROIDI AVANT DE DÉBUTER L'INSTALLATION

Les bornes de chenet peuvent être placées à l'intérieur de la chambre de combustion sans toutefois nuire à la flamme.


Selon l'appareil, il y a plusieurs endroits acceptables où installer les bornes de chenet.

Une fois l'emplacement déterminé, fixez les bornes de chenet à l'aide d'au moins une vis par borne; deux vis par borne sont recommandées.

Ne modifiez ni ne déplacez pas les bûches pour accommoder les bornes de chenet.

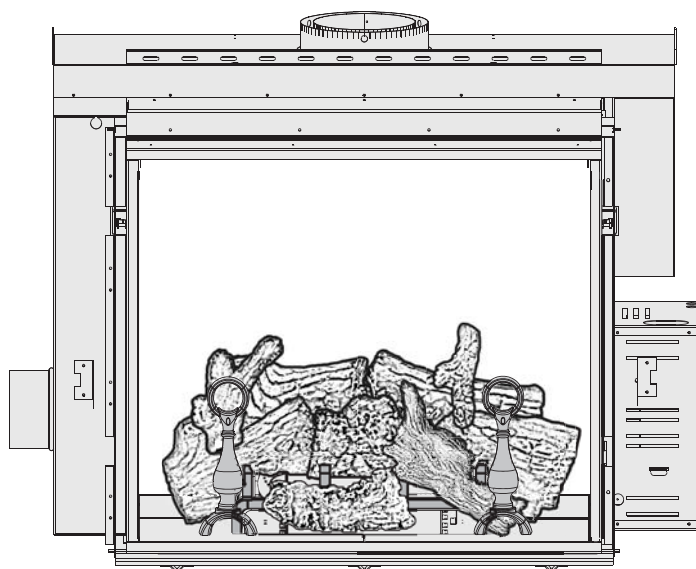

Exemple HD81

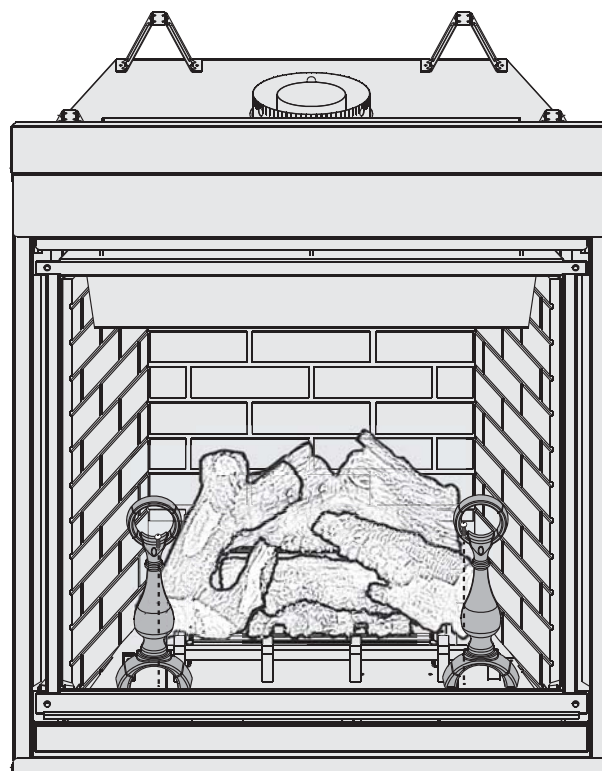

Exemple HD35