



BRICK36TBPLA

Models: QUARTZPLA36IN / QUARTZPLA36IL

Installation Instructions



Leave this manual with party responsible for use and operation.

DANGER



HOT GLASS WILL CAUSE BURNS.

DO NOT TOUCH GLASS UNTIL COOLED.

NEVER ALLOW CHILDREN TO TOUCH GLASS.

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and must be installed for the protection of children and other at-risk individuals.

CAUTION! Do not install damaged components.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation.

NOTICE: Handle refractory panels with care. Refractory may chip or crack if dropped or impacted.

TOOLS

Screw gun equipped with 1/4 in. socket or 1/4 in. wrench or socket

KIT COMPONENTS

- (1) Left Refractory Panel
- (1) Right Refractory Panel
- (1) Rear Refractory Panel
- (1) Top Refractory Panel

Installation Instructions

1. If installed, remove any existing brick or glass liner kits, logs and remove any media from the left and right basepans.
2. Lift and remove the left and right basepans. See Figure 1.

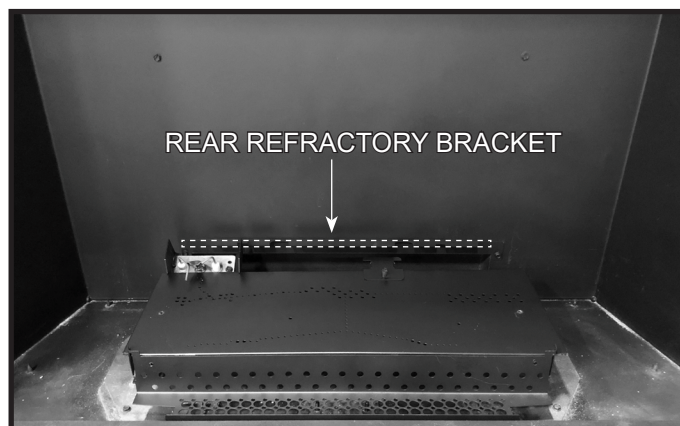


Figure 1 Remove Left and Right Basepans

3. Remove left, right, back and top refractory pieces from the packaging.
4. Install the rear refractory by placing it into the rear refractory bracket located above the air passage. See Figure 1. Push down on the panel to ensure that the outer legs engage screw tips.
5. Gently push the rear refractory toward the back of the firebox until the refractory contacts the firebox. See Figure 2.



Figure 2 Install Rear Refractory

- Bend the rear tab upward on both the basepans and reinstall. The side tabs are to remain unbent. See Figure 3.



Figure 3 Rear Refractory Panel Installed

- Install right side refractory panel until it contacts the back wall refractory. See Figure 4.
- Install top refractory by inserting into the firebox and placing the right side on top of the right refractory panel as shown. See Figure 5.
- Push "UP" on top refractory and install left side refractory panel.
- Installation is complete when top refractory panel is set securely in place. See Figure 6. Top refractory panel may need to be pulled down to fit correctly. Chamfers should properly fit together and gaps should be minimized with correct installation.

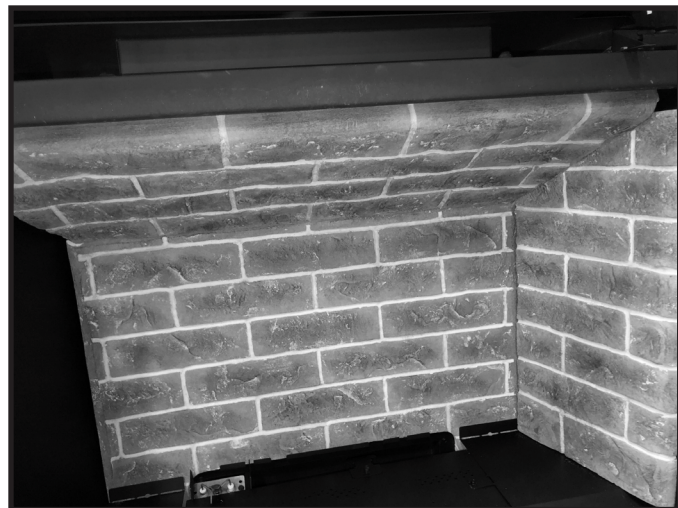


Figure 5 Install Top Refractory Panel

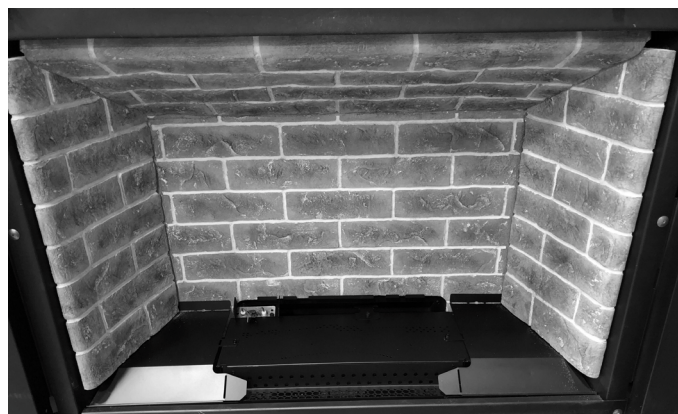


Figure 6 Refractory Installed



Figure 4 Install Refractory Panel (Right Side Shown)

Note: The grout line should match consistently between the left, right, and rear refractory. If grout lines are not aligned, verify that the basepans are set directly on the firebox floor to ensure proper side refractory fit.

Please contact your Majestic dealer with any questions or concerns.

For the location of your nearest Majestic dealer, please visit www.majesticproducts.com.

Majestic, a brand of Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.majesticproducts.com